


**2014 Debit-Checkbook Cases+**  
 by Sherry Titzer  
<http://www.atimetostitch.com>

List of supplies & fabric cutting instructions provided with orders. This tutorial is for 7" x 11" or larger hoops to make the case completely in the hoop except for the final top stitching around the edge!  
 Just follow the steps in the order listed below!

**Step 1 – Debit-credit card ensemble, Step 2 – ITH (in the hoop) Case with design**

**STEP 1 – Debit/credit card sleeve & checkbook pocket**

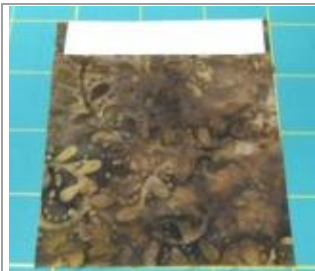

1



2



3

- 1 – Debit/Credit Card Sleeves - Cut fabric following instructions in text file. Fuse strips of Heat 'n Bond to top of "sleeve" pieces.  
 2 – Fold fabric at inside edge of paper backed tape, iron to crease fold. Remove paper & iron to fuse folded fabric on all 4 sleeves.  
 3 – Use left over paper from tape to mark short lines on the front of each sleeve 5/8" down from the top (for spacing the sleeves)



4. On 1st piece of BASE fabric, mark lines on edges 1 3/4" down from top. Rub glue stick at corners on wrong side of 1<sup>st</sup> sleeve. Flip sleeve over and place top of sleeve even with the 1 3/4" marks on the base.



5. Stitch across bottom of sleeve with 1/4" seam. Add the remaining 3 sleeves down front of base fabric in the same manner. (4 debit/credit card sleeves when finished)



6




7



8 & 9

6. On wrong side of 2nde BASE fabric add strip of Heat 'n Bond to left side. With sleeve ensemble right side up (sleeve openings at the top) pin the base fabric WRONG SIDE UP even with right edge of sleeve ensemble, stitch with 3/8" seam.  
 7. Flip fabric around the seam keeping fabric in seam flat inside to create edge that looks bound. Press, remove paper backing and iron to fuse fabric to back. (Note: Fabric wrapped to back will not completely cover fabric to reduce bulk. It will not show at all on finished case)  
 8. Top stitch both long sides 1/4" seam to secure sleeves. (I added debit cards so you can see the slots better).  
 9. Checkbook Pocket – Fuse strip of Heat 'n Bond to wrong side even with a long side. Fold at inside edge of paper, iron to crease. Remove paper backing and iron to fuse.


## STEP 2 – Debit-Checkbook Case

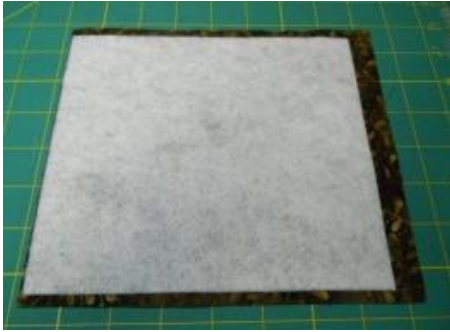

10



11

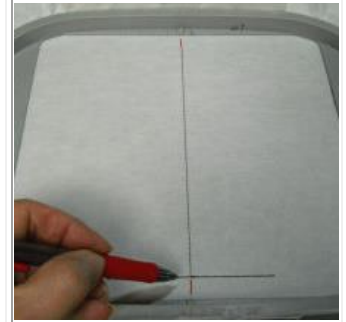

12

10. On **WRONG SIDE** of CASE fabric, center the fleece evenly between the 7 ½ sides but even with 1 edge so there is ½” of fabric on one end with no fleece. (this reduces bulk on the front edge of the finished case)

11. Flip fabric to right side and mark a short center line on the 7 ½” “no fleece” edge (center is 3 ¾” in from each side).

12. Hoop stabilizer. Stitch placement line on stabilizer. Extend the vertical line by adding marks on stabilizer at top and bottom.



13



14

13. Place “no fleece” edge of fabric in hoop next to horizontal placement line keeping center marks on fabric even with stitched center line on stabilizer. Tape fabric at corners, put hoop on machine. Next step stitches basting outline to secure fabric in hoop and an “inner” applique fabric placement line. Center applique fabric wrong side up above and even with the placement line (at top of hoop). Tape edges, put hoop on machine.

14. Next step stitches seam to tack applique fabric down on one side.



15



16


15. Remove scotch tape and flip applique fabric over until snug against seam just stitched. Tape corners, put hoop on machine.

16. Continue stitching design following the instructions in the text file provided.

NOTE: Steps 14 - 15 may not apply to future sets (they do apply to Sets 1 & 2).



17

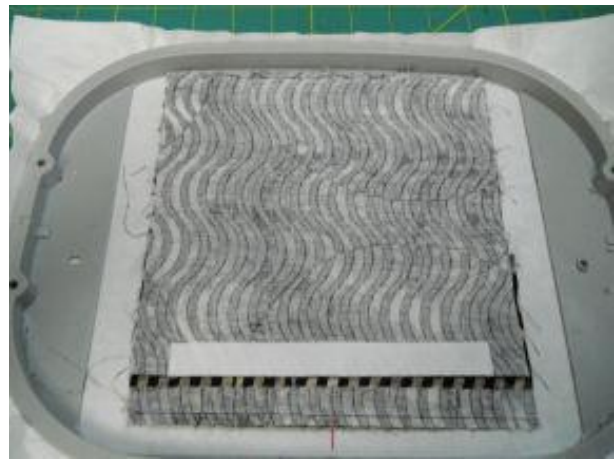

18

17. When instructed, center debit/credit card sleeve wrong side up (folded edge to middle) at the bottom even with edges of fabric in hoop. Next, center checkbook pocket at top of hoop even with edge of fabric in hoop as well. Tape corners.

18. Next, center lining fabric in hoop keeping top and sides even with fabric in hoop and edge with fusible tape at the bottom. Note: Lining will not cover bottom of fabric in hoop on purpose!. Tape corners, put hoop on machine.



19



20

19. The last step stitches the case outline to put it all together! Remove from hoop, trim corners for turning. Trim all sides to 1/4" seams to reduce bulk. Turn right side out through opening in lining.

20. Maneuver until seams are even at edges and lining is flat under credit card ensemble. Remove paper from fusible tape and iron to set edges and fuse opening in lining to case. Top stitch around edge of case with scant 1/4" seam. You're finished!



Inside of case showing debit/credit sleeves



Inside of case showing checks and ledger.